


















Do I have a leak?

If the leak icon is on or flashing...

- Check all toilets and toilet valves. The most common leak is a leaking toilet. Toilets can leak 200-gallons per day or more. JCWSA has dye tablets and instructions available at our office to assist with checking your toilet for leaks.
 - Check all faucets for possible leaks
 - Check the ice maker and water dispenser
 - Check the yard and surrounding area for a wet spot or other indication of a leaking pipe
- Refer to the table below for other possible causes

Common Causes of Leaks

Possible Cause	Intermittent	Continuous
Outside faucet, garden or sprinkler system leaking		
Faucet leaking		
Toilet valve not sealed properly		
Washing machine leaking		
Dishwasher leaking		
Water-cooled air conditioner or heat pump leaking		
Toilet running		
Ice maker leaking		
Leak between the water meter and house		
Water heater leaking		

After Repair of a Continuous Leak

- Use no water for at least 15 minutes
- Check the leak icon
- If the leak icon changes from on to flashing, a leak is no longer indicated.

After Repair of an Intermittent Leak

- Check the leak icon after at least 24 hours
- If the leak has been correctly repaired, the leak icon changes from flashing to off.

The leak icon may be on or flashing if you are...

- Using a soaker hose
- Watering your yard for more than eight hours
- Using a continuous pet feeder on your water line
- Filling a swimming pool
- Using water continuously for 24 hours

For additional information:

(706) 367-1741

customerservice@jcwsa.com

