



NOTES:

1. CURB AND/OR STREET MUST BE COMPLETE BEFORE UTILITIES CAN BE INSTALLED.
2. MEASURE UTILITY LOCATION FROM BACK OF CURB.
3. LOCATE WATER ON NORTH OR WEST SIDE OF STREET. LOCATE GAS ON SOUTH OR EAST SIDE OF STREET. RECOMMENDED PLACEMENT IS BACK EDGE OF CORRIDOR TO MINIMIZE DAMAGE TO SIDEWALKS.

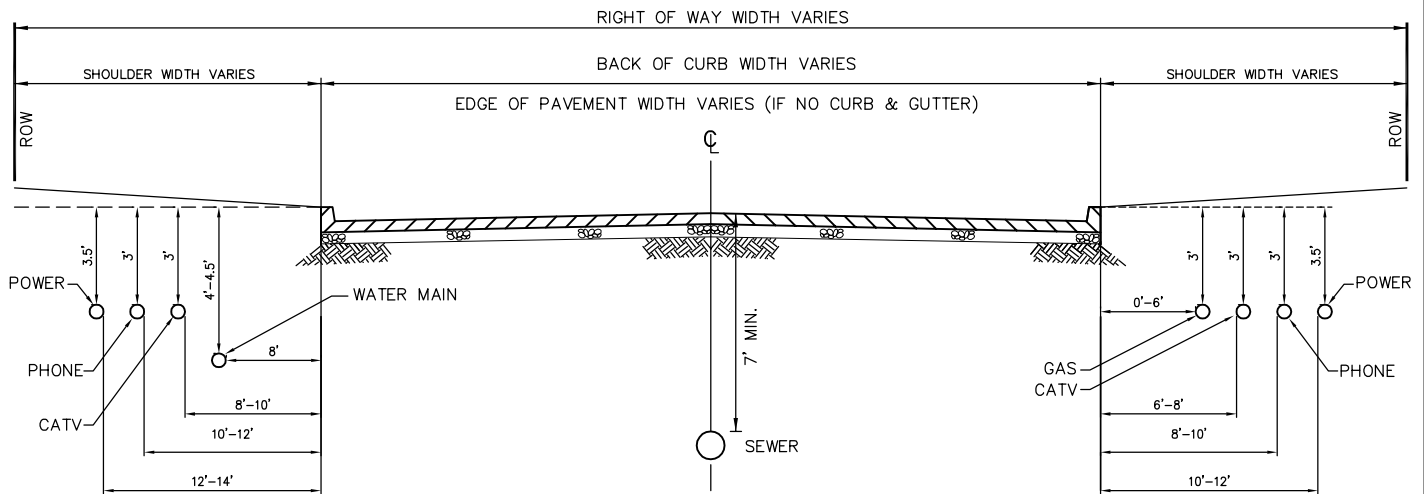

RIGHT OF WAY WITH CURB & GUTTER

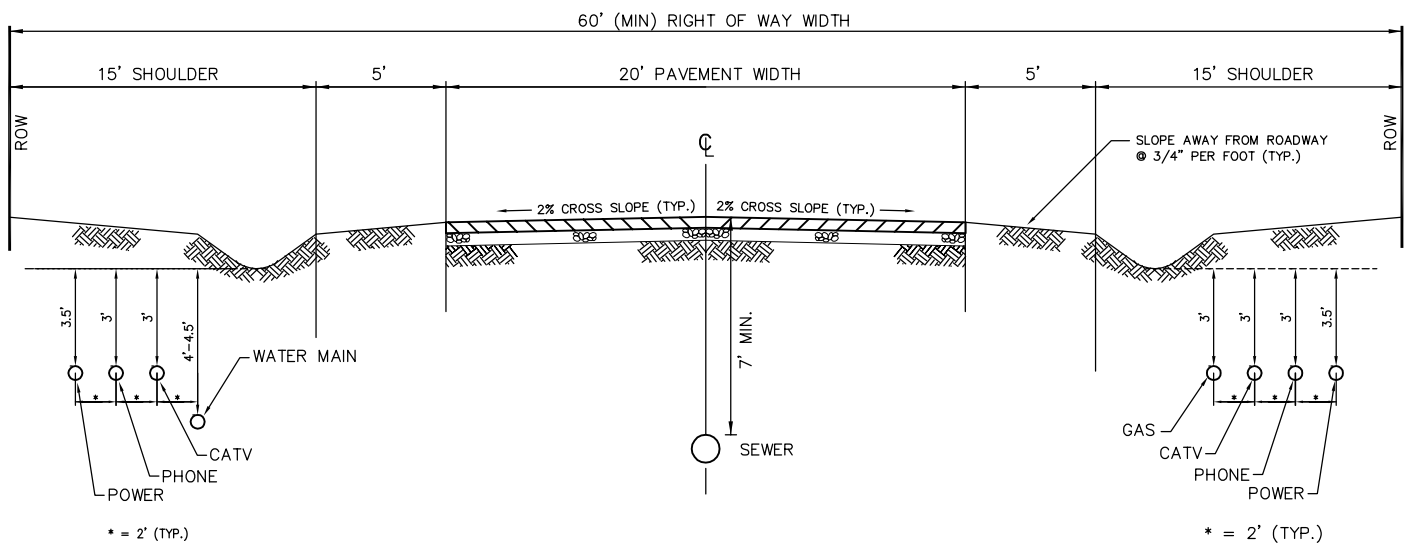

RIGHT OF WAY WITHOUT CURB & GUTTER

NOTES:

1. CURB AND/OR STREET MUST BE COMPLETE BEFORE UTILITIES CAN BE INSTALLED.
2. MEASURE UTILITY LOCATION FROM OUTSIDE TOP OF BANK (SEE ILLUSTRATION).
3. LOCATE WATER ON NORTH OR WEST SIDE OF STREET. LOCATE GAS ON SOUTH OR EAST SIDE OF STREET.

**JCWSA STANDARD DETAIL C-1
UTILITY PLACEMENT**

**SCALE: NTS
DATE OF LAST REVISION: 12/06**

**JACKSON COUNTY
WATER & SEWERAGE AUTHORITY**

